






These back door assembly kit consists of 1 or more door panels, depending on the size of the rack to be fitted

Rack Size	Qty	Panel Size	Extra
R06	1	BD06	
R08	1	BD08	
R12	2	BD06	
R16	2	BD08	
R20	2	BD06	1 BD08
R24	3	BD08	
R28	2	BD08	2 BD06
R35	4	BD08	1 BD03


BACK DOOR PANEL FITTING INSTRUCTIONS

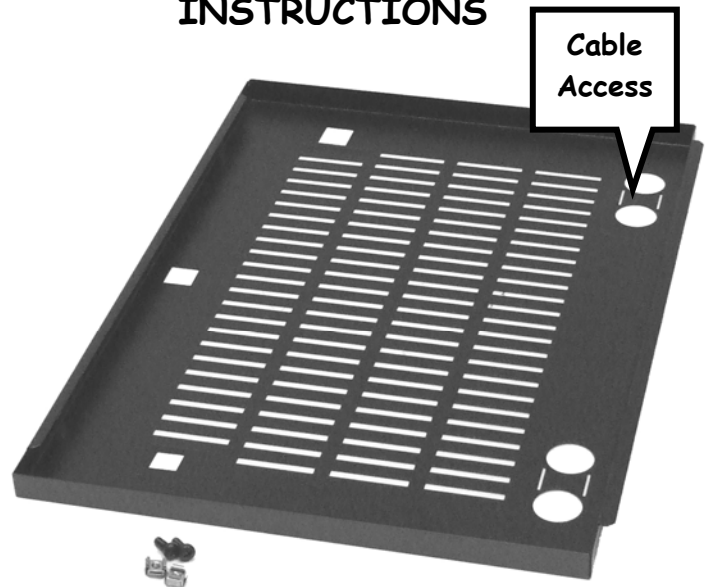

A. Fit 2 M6 Cage Nuts to the panels that are to be joined together
B. Join the panels together

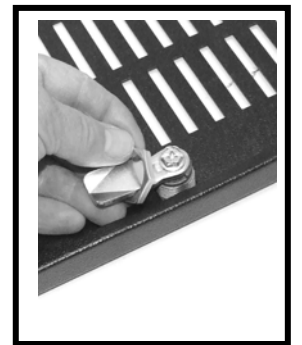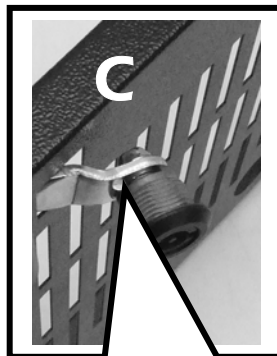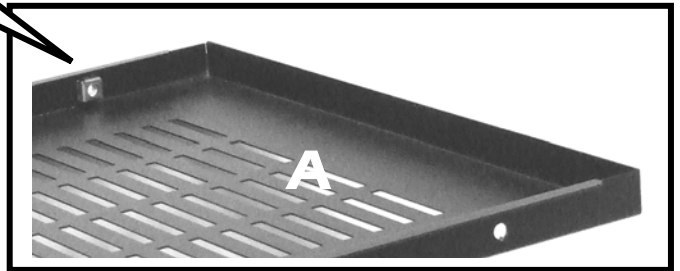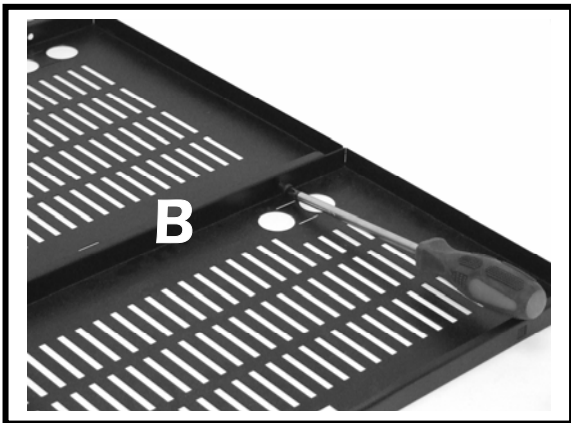


C. Fit the cam locks - make sure the cam is in correct alignment for quarter turn latch operation

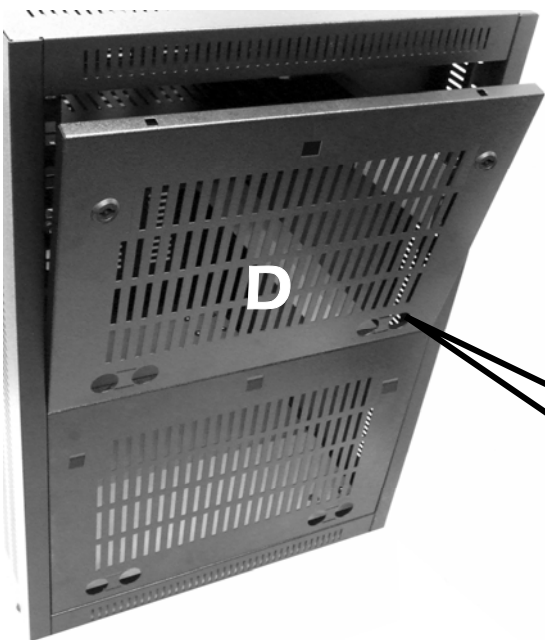

D. Fit the door assembly to the rack - bend the panels back slightly for a tight fit when closed

Fitting Back Door Panels to Console Style Racks

CR12 & CR16

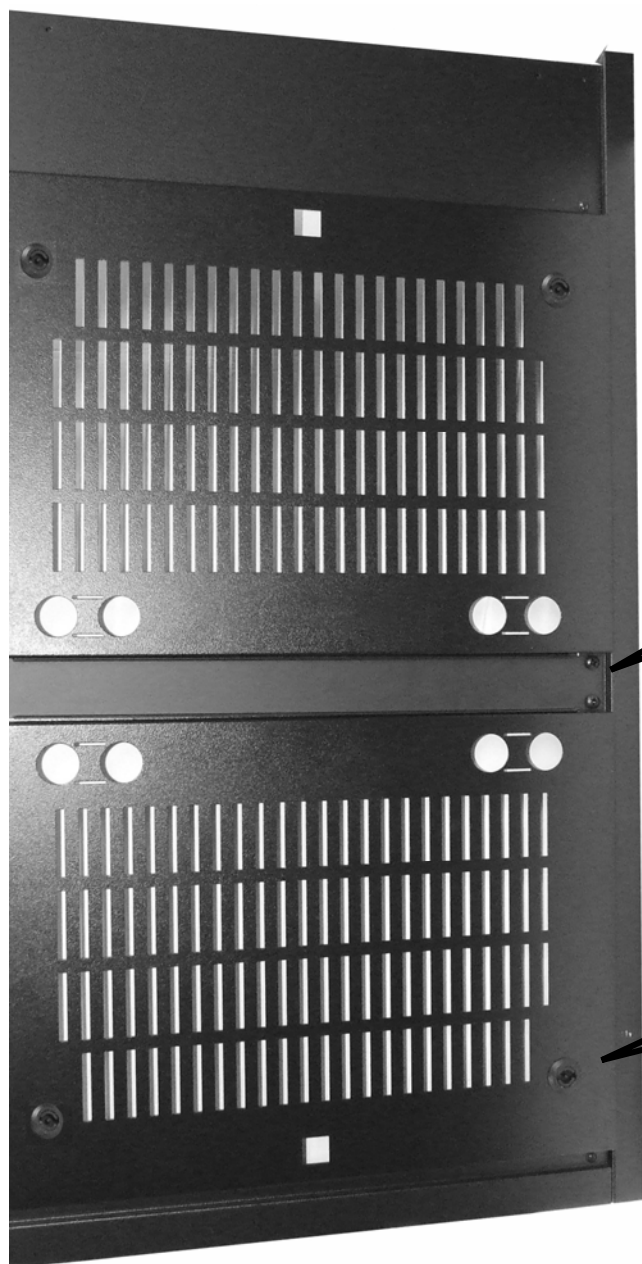

Due to the different design of these racks you will need to fit a 1U Blank Panel in the centre of the rear rails as shown here

This application needs 4 cam locks as shown, because these panels will not lock with the top & bottom panels

PLEASE NOTE
The panels also have to be mounted bottom to bottom as shown here