


Contractor Series

C10U MK2 ASSEMBLY INSTRUCTIONS




The fixing kit has
16 M4 chimney nuts
18 M4 x 12 screws
2 M4 x 20 screws
2 M4 Hex Spacers
2 Rubber Feet & Fixings
2 Pocket Handles
2 Levelling Feet Screws


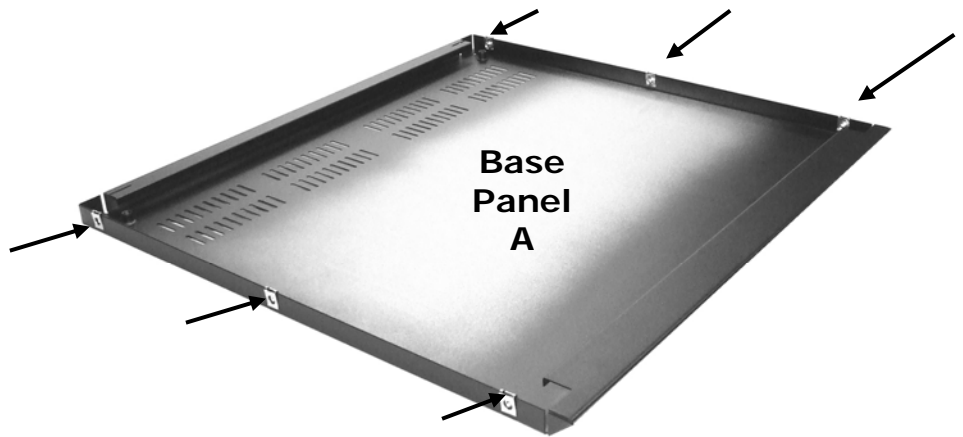


Base Panel
A


Push on all chimney nuts
with the flat side outwards
on Panels A, B, & C
See the Arrows

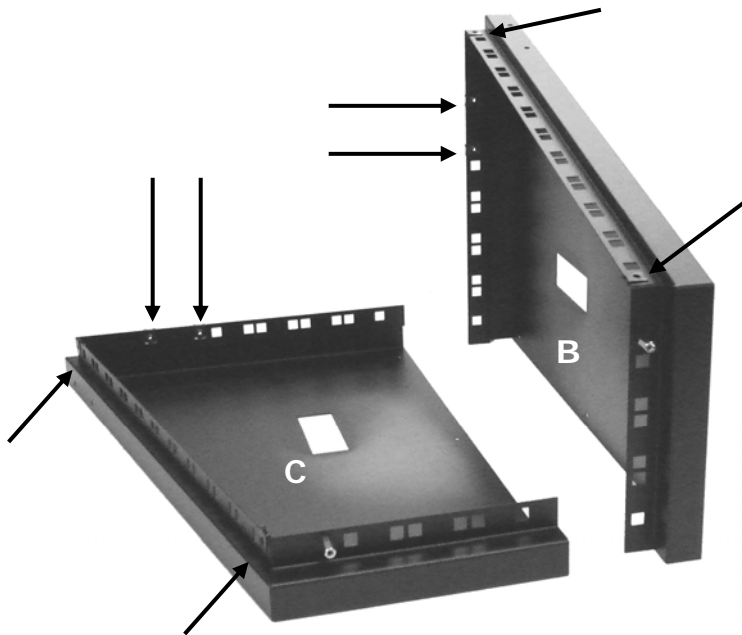


Fit the 2 M4
Hex spacers as
shown do not
Fully Tighten

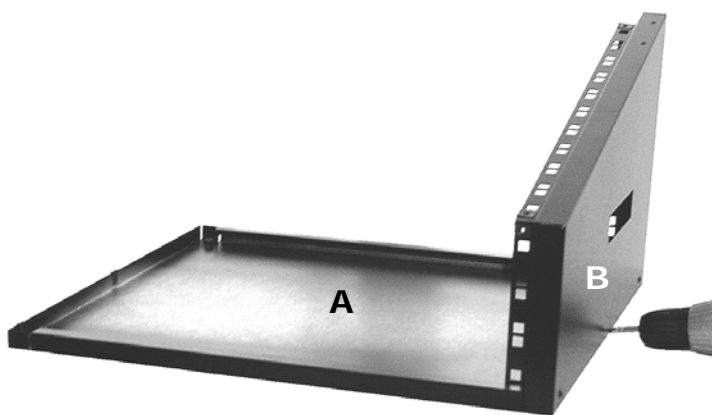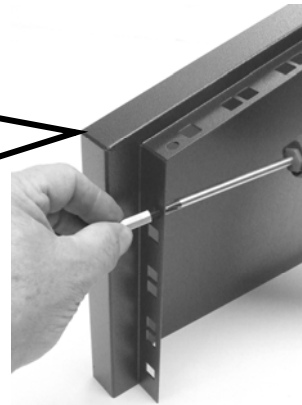

Fit **B** to **A** - the tongues on **A**
should fit inside the channel
sections of **B**

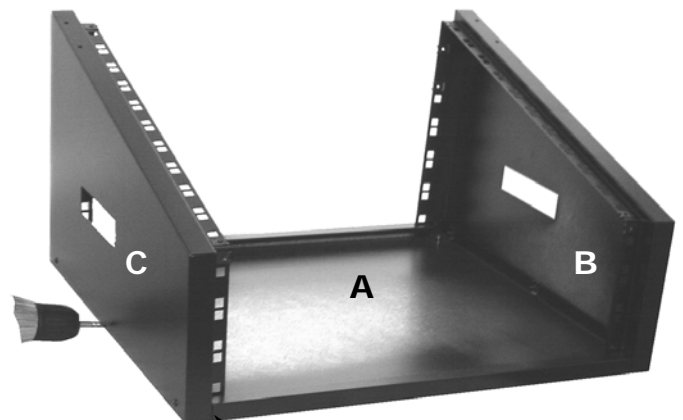

Then fit **C** to **A** - the tongues
on **A** should also fit inside the
channel sections of **C**

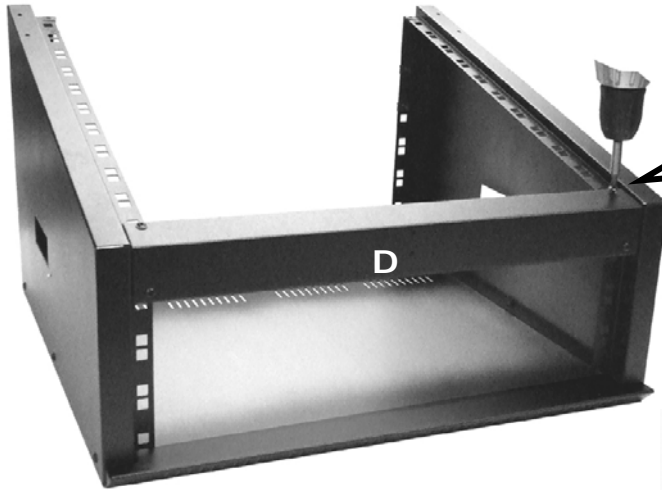

Next fit the front rail **D**
between **B & C** – As shown
Use the 2 long M4 screws
through the top fixing holes


Align to the hex spacers and
fix with standard M4 screws
Then fully tighten all the
screws on the spacers

Now fit the rear rail **E**
between **B & C** – As shown



Fit the 2 **Rubber Feet** on to
the front corners of the base
Then screw in the levelling
thumbscrew feet at the back of
the base. Finally Push Fit the 2
Pocket Handles into the sides

**The Additional Head-Up top unit can now be fitted
see the instructions with the C03 Kit**

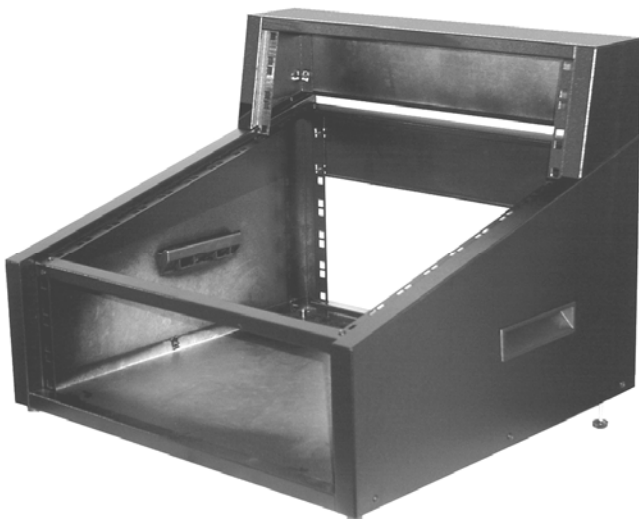

© Designed & Manufactured
in the UK by

Rackz
Limited

Unit 10 21-23 Wood Road,
Kingswood, BRISTOL,
BS15 8DT UK