


Contractor Series

CR12 & CR16 ASSEMBLY INSTRUCTIONS




Your fixing kit has
18 - M4 'U' Spring nuts
20 - M4 x 12mm screws
2 - M4 x 16mm screws,
2 - M4 x 20mm spacers

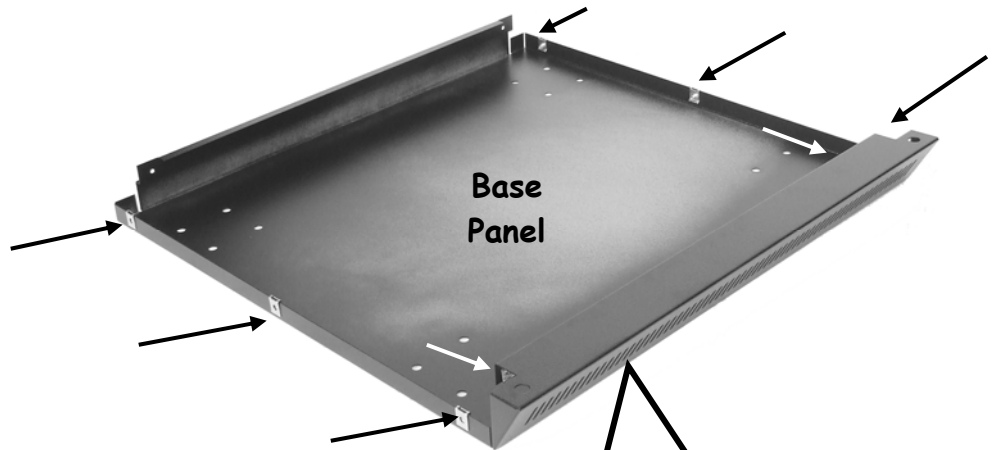


1
Fit 20mm Hex spacer to
the top front hole of each
side **DO NOT FULLY
TIGHTEN**

2
Push on the 'U' spring nuts
with the **flat side
outwards** including the 2
corner areas on the back
of the bases front lip.

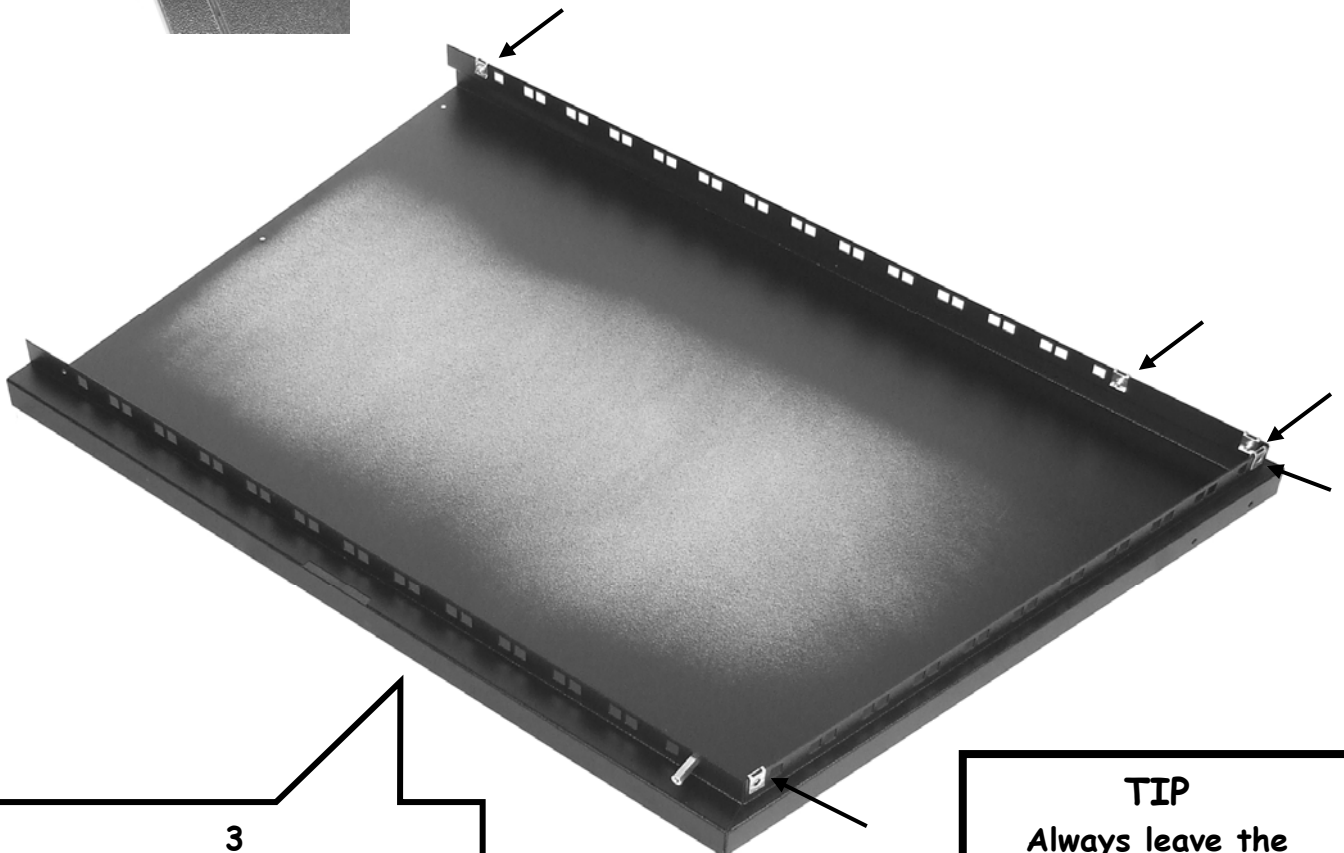


3
Push on the 'U' spring nuts
with the **flat side outwards**
onto both side panels
as shown

TIP
Always leave the
screws just slightly
loose, then when the
unit is fully assembled
go round and tighten

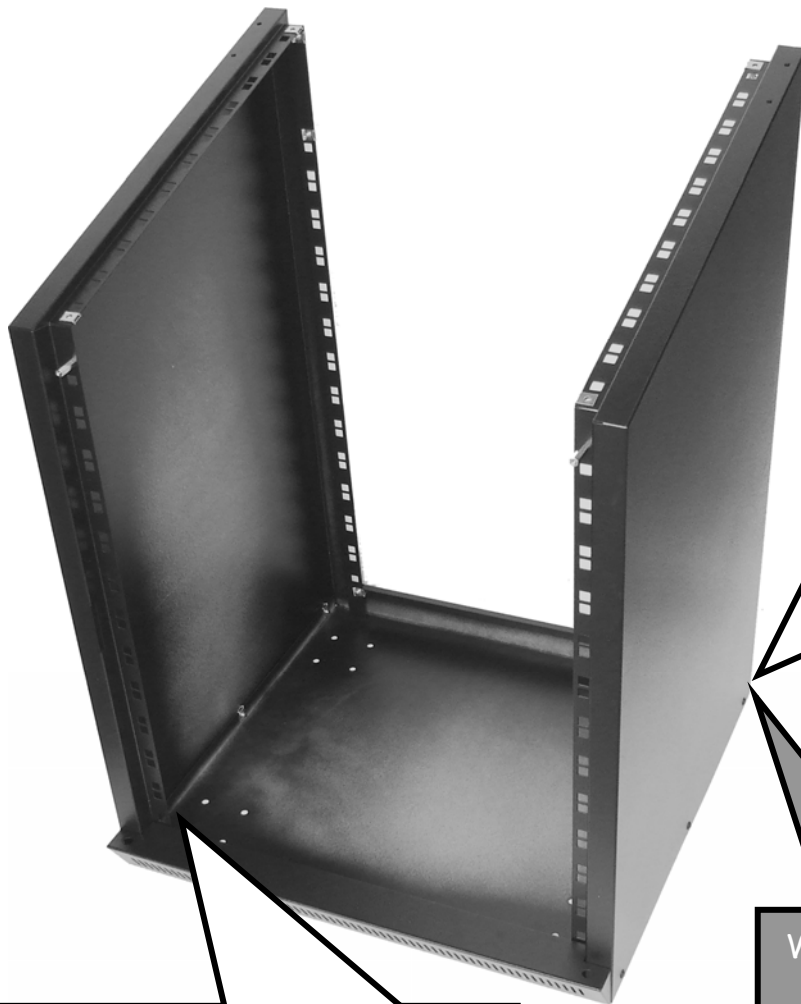


5

Now fit the back corner screw as shown and the three side panel screws **Before** moving on to fit the 2nd side panel

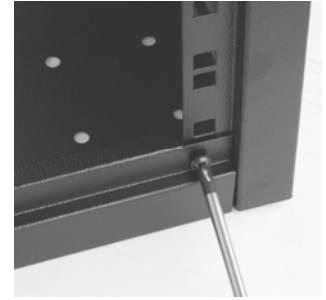

4


Assemble the 1st side and fit the internal corner screw and tighten, then go straight to stage 5

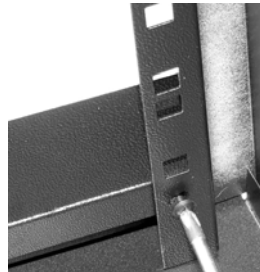

When fitting the sides on **ALLWAYS** Make sure the rear tongue on the **BASE** fits inside the back channel section of the side panel

6

Now fit the front bar using the two **M4 x16mm SCREWS** for the top and the M4 x 12mm into the front spacers Finally fit the back panel as Illustrated

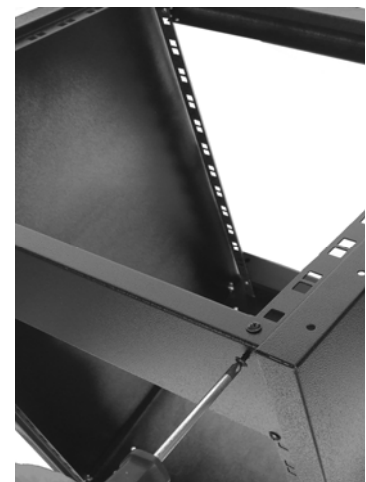

Rackz
Limited