

Contractor Series

BENCH-TOP RACK 2U – 8U




ASSEMBLY INSTRUCTIONS

Push on all 'U' spring nuts – with the flat side outwards



Your kit has 12 sets of M4 'U' Spring chimney nuts & screws 4 Rubber Feet with Screws


The Screws may need to be angled up slightly to avoid crossing the threads

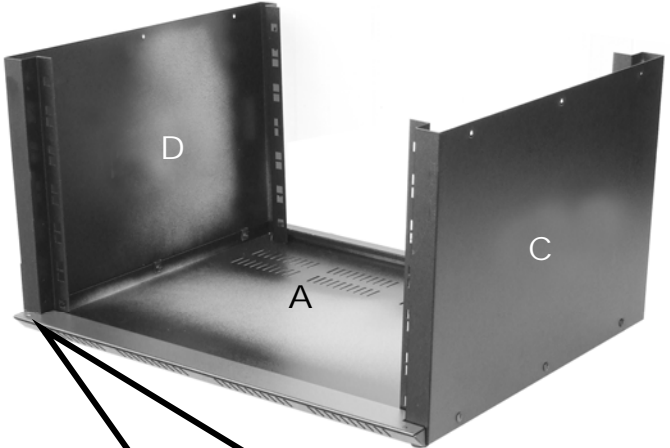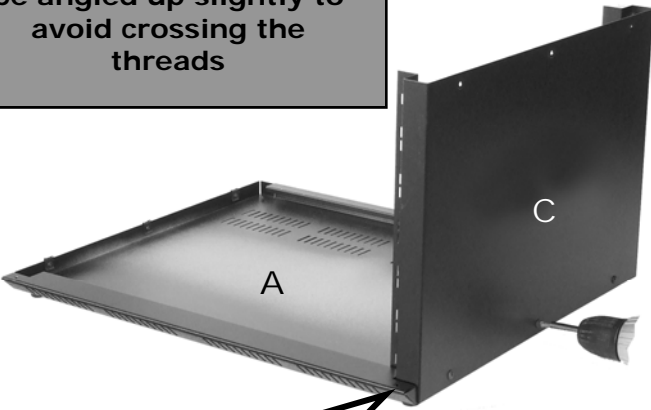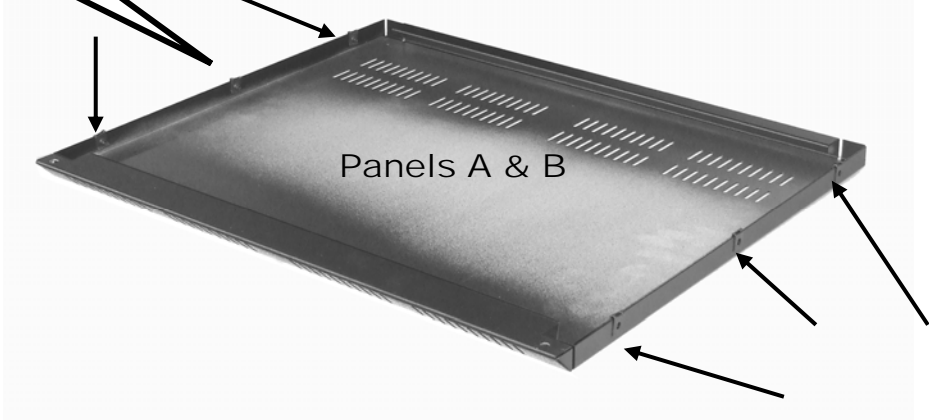

Fit **C** to **A** - the tongues on **A** should fit inside the channel sections of **C**

Then fit **D** to **A** - the tongues on **A** should also fit inside the channel sections of **D**

Now fit **B** onto **C** & **D** - the tongues on **B** should fit inside the channel sections of **C** & **D**

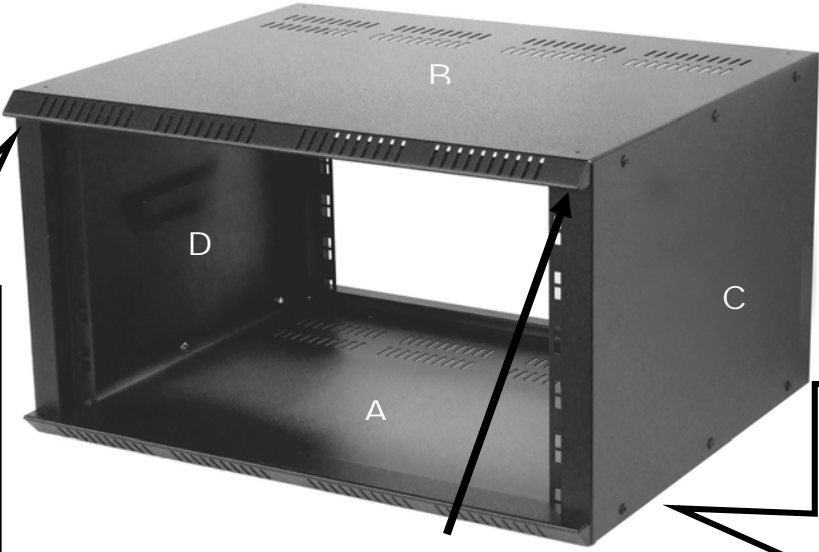

Finally Screw on the **Rubber Feet** onto 4 corners of the base

