


Contractor 600 Series


ASSEMBLY INSTRUCTIONS




Your kit has 24 sets of
M6 'U' Spring Chimney
Nuts & Allen Screws
4mm Allen Key Required

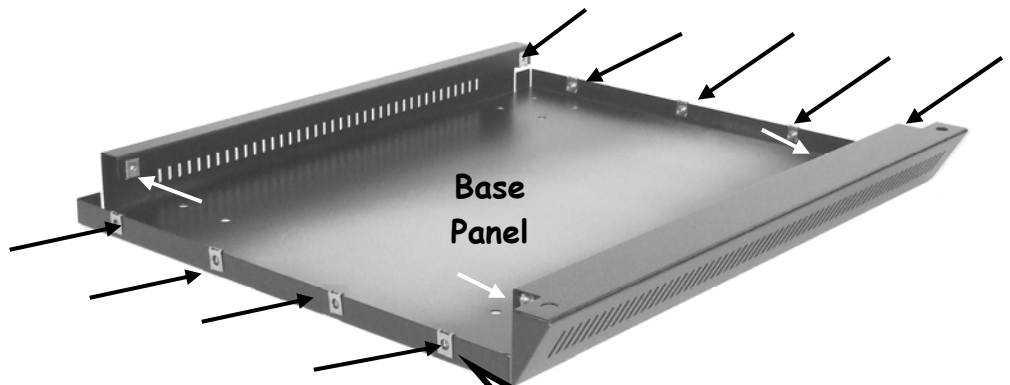

Base
Panel

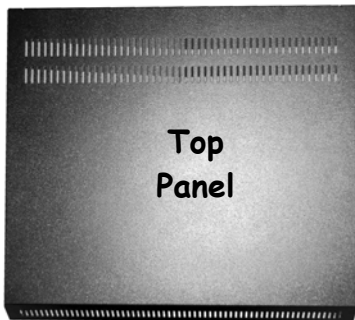

Top
Panel

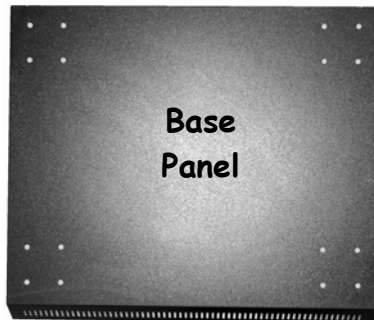

Base
Panel


2

Push on all 'U' spring nuts
with the flat side
outwards including the 4
corner areas on the back
of the front lips
of the T & B Panels

3


THE SIDES ARE HANDED

So Should you
intend fitting
a **DOOR** then
make sure the
LOCK SLOTS
are at the
front of the
assembly
as shown

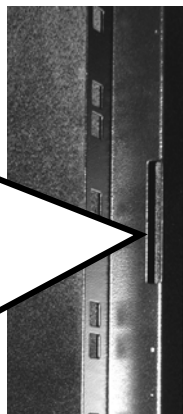


5

Now fit the 2 internal
corner screws and tighten
before moving onto fit 2nd
side panel

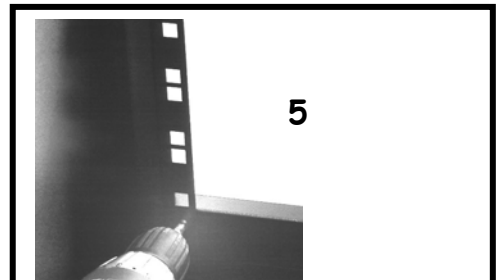

4

Fit 1st side panel - the
rear tongue on the **BASE**
should fit inside the
back channel section
of the side panel

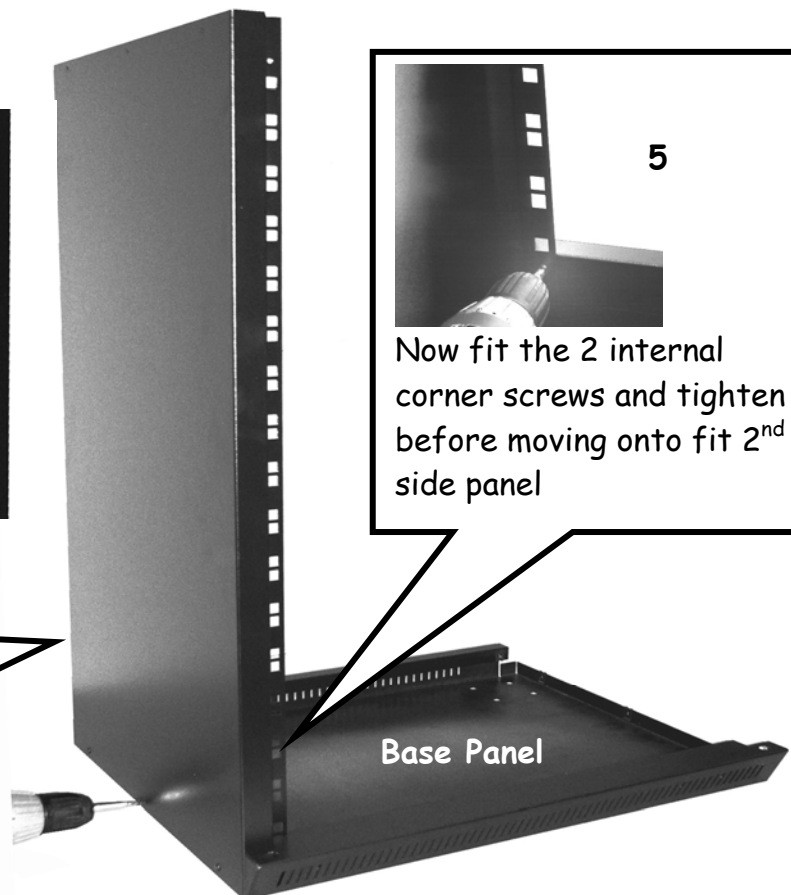

Base Panel



6
Fit other side panel - again
make sure the rear tongue
on the **BASE** fits inside the
back channel section of the
side panel

7
Finally fit the top panel -
Don't forget to make
sure the rear tongues on
the top fit inside the
channel sections of the 2
sides at the back



8
Always leave the
screws just slightly
loose, then when unit
is fully assembled go
round and tighten up

Rackz
limited