



ASSEMBLY INSTRUCTIONS FOR THE CASTOR BASE/600 KIT MK3

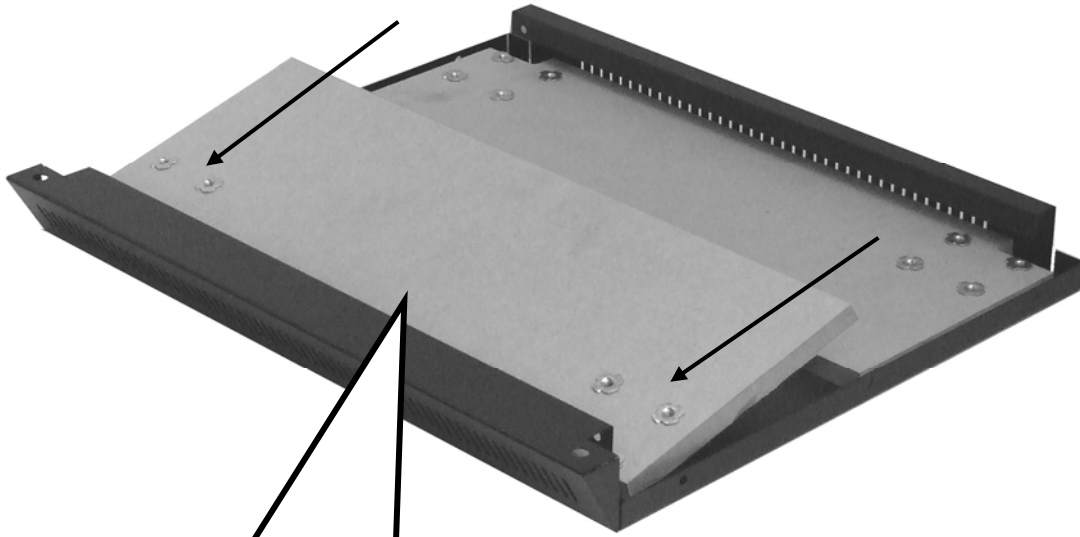

BEFORE fitting the 'U' spring nuts to the base, put in the wood platform into the base panel as shown **with the 'T' nuts upwards**

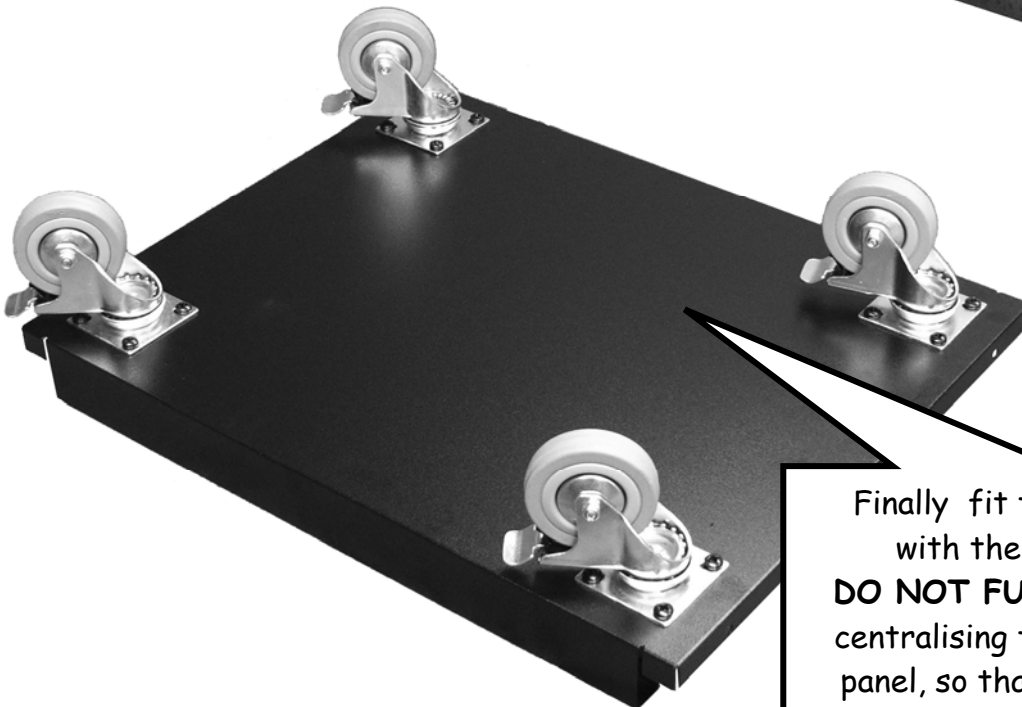

Finally fit the castors to the base with the M6 screws provided. **DO NOT FULLY TIGHTEN BEFORE** centralising the wood platform in the panel, so that the clips & side panels can be fitted with ease