
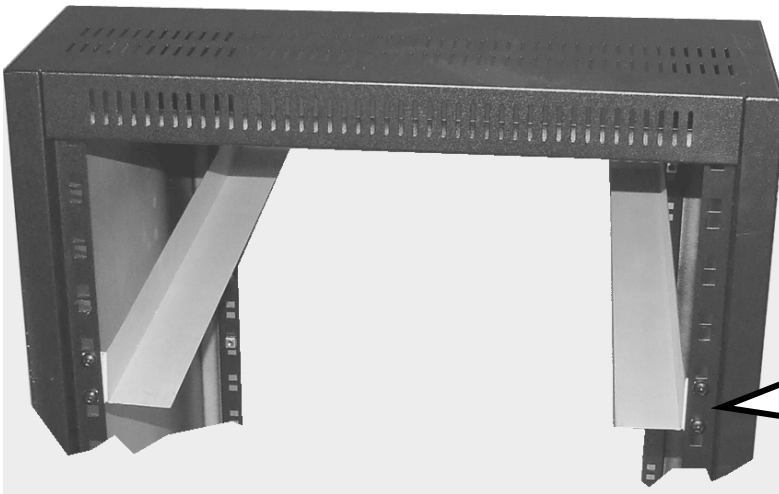




Contractor Series

ASSEMBLY INSTRUCTIONS FOR THE SRK & SRK-600 SUPPORT RAILS

First fit the 4 M6 chimney nuts to the oval holes on the rear ears as shown

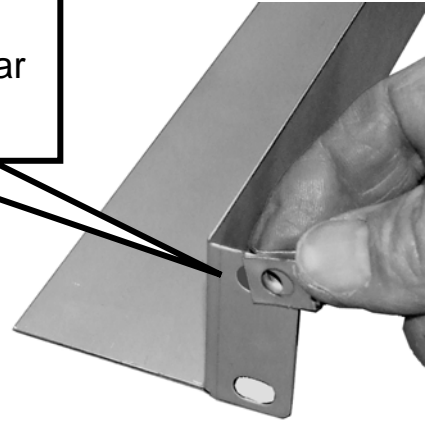

Next attach the support rails through the back mounting strips
Aligning them to fit the bottom of the unit being fitted

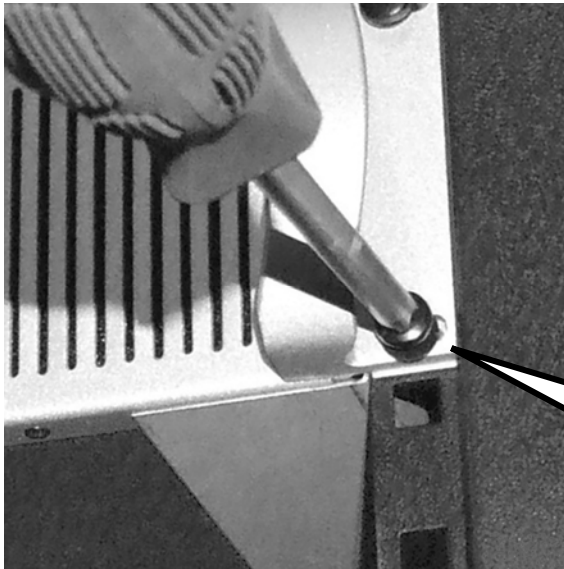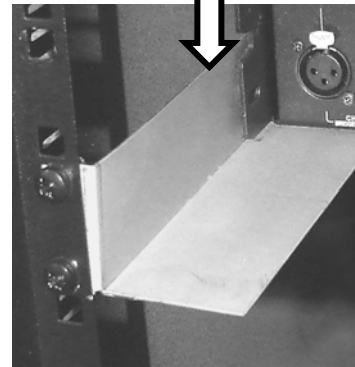

Mount the unit to be supported by fixing the front fasteners through the front panel mounting holes with the bracket behind

PLEASE NOTE THAT MOUNTING HEAVY EQUIPMENT IS EASIEST
WITH THE RACK LAID ON ITS BACK

ALTERNATIVE ASSEMBLY INSTRUCTIONS FOR THE SRK & SRK-600 SUPPORT RAILS

USING A 1U BLANK/VENT PANEL SLIDING
SUPPORT RAILS CAN BE ACHEAVED

